

User Privileges

Administrator - The Administrator user has access to all configuration settings on the camera. In addition the administrator can move the camera's field of view, adjust the image parameters, and view the camera image.

Operator - The Operator user can move the camera's field of view, adjust the image parameters, and view the camera image.

Visitor - The Visitor user can only view the camera image.