




Remove IR LED board retention screws. Make note of the orientation of lens/sensor assembly.

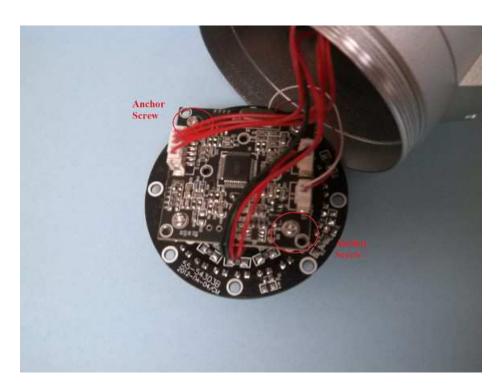

Remove anchor screws securing lens/sensor assembly to IR LED board.

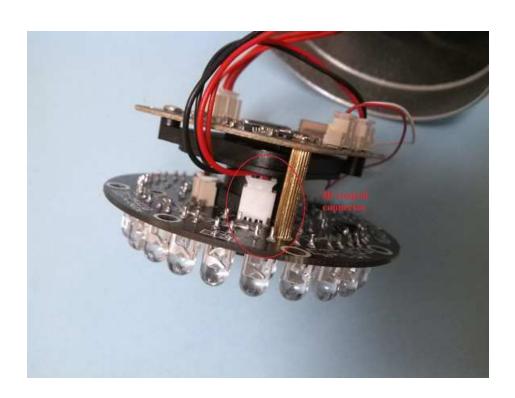


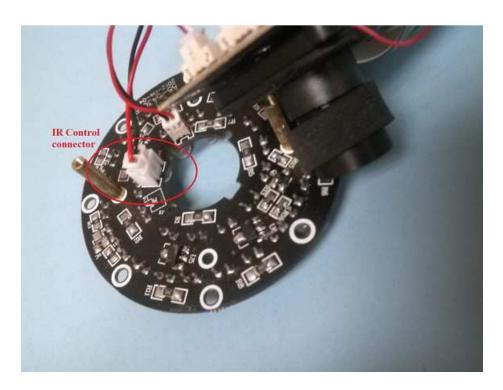

Remove IR Control lead from IR LED board.



Attach IR attenuation cable to IR Control connector.

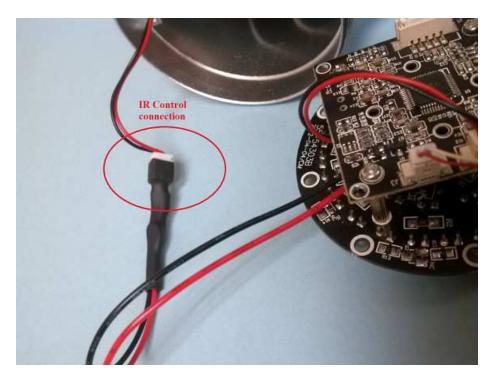

Attach IR Control lead to IR attenuation cable.