

Reset H5060W to Factory defaults

To reset the H5060W camera to factory defaults hold in the reset button with a paper clip for 30 seconds. The reset button for the H5060W is on the bottom. After the camera has been reset it will restart. The username/password will be reset to:

user: admin

pw: (no pw)