

## Setting the H5060W/H5080W to a static IP address

1. You will need to use the web UI to access the Network Settings.
2. To use the web UI on a PC you will need to use the search tool on the CD (or from the Avacom Support page).
3. After launching the search tool on your PC double click on your camera in the list. This will launch a web browser. Log into the camera with your username/password.
4. To use the web UI on a Mac you will need to log into your router and find the IP address the router assigned the camera and type this into your web browser (Safari, Firefox, or Chrome). Log into the camera with your username/password.
5. At the bottom of the web browser screen there is a wrench and screwdriver icon. Clicking on this will take you to the general configuration screen. Go to 'Network Settings'. Next go to LAN Settings.
6. The 1st option on the list is Enable DHCP. Uncheck this option to set the camera to a static IP address.
7. Click Setting and the camera will restart.