

Signal Lamp (LED) and Call Preset on Boot Configurations

1. You will need to use the web UI to access PTZ Settings.
2. To use the web UI you will need to use the search tool on the CD (or from the Avacom Support page).
3. After launching the search tool on your PC double click on your camera in the list. This will launch a web browser. At the bottom of the web browser screen there is a wrench and screwdriver icon. Clicking on this will take you to the general configuration screen. The Next to last on the configurations listing is 'PTZ configuration'. Click this and go to PTZ Settings.
4. The 1st option on the list is Signal Lamp. Disable (or Close) this option to turn off the green LED.
5. Leave the 2nd option unchecked.
6. The next option is 'Call Preset on boot'. Click on the list and choose '1'. Then click submit (or set up).
7. Go back to the viewing screen by clicking on the back arrow in the upper right corner. At the bottom on the right hand side you will see 'call' , 'set' , 'default'. With the camera pointed to where you need it click 'set' and then the number 1. The camera will return to this position if it restarts for some reason.