



avacom
ADVANCED VISION & AUDIO



NVR-1108P / NVR-5116P-V3

H.264 Network Video Recorder

Quick Start Guide




HDD Installation

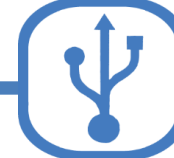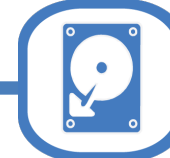


Device Layout

Rear Panel

8 Channel

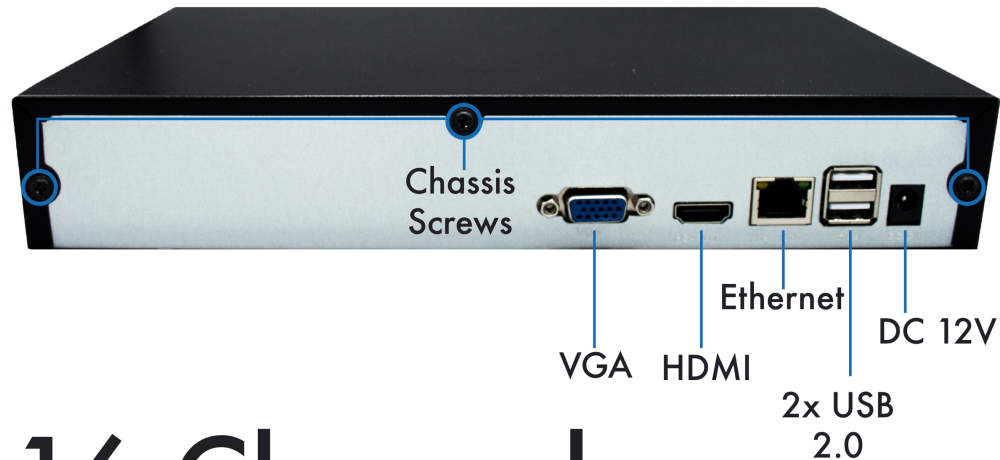

16 Channel

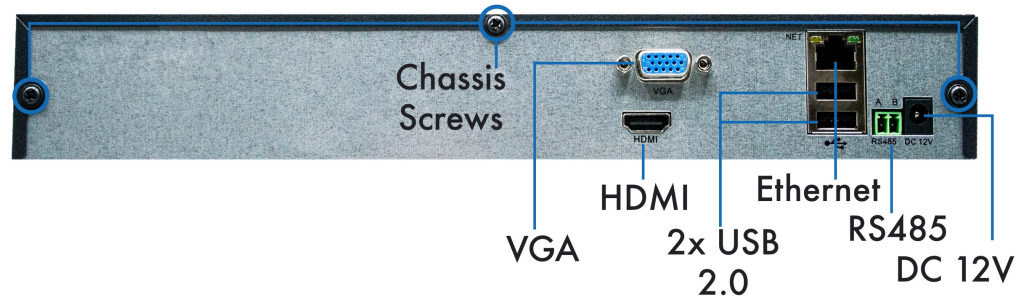


Hardware Installation

How to add HDD to your NVR

1. Remove 5 screws on the sides and back panel of the NVR.




2. Slide the NVR cover off (as shown in the image):

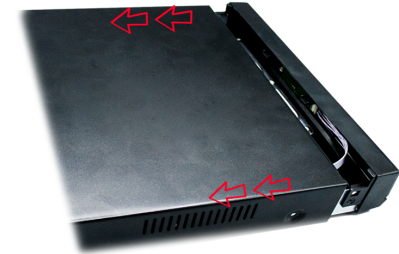

3. Mount the HDD using the 4 screws that came with the NVR, through the base of the chassis:



4. Connect Power And Data cables

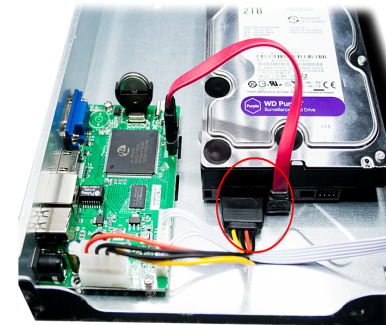

4. Once the HDD has been installed
Slide the top cover onto the NVR and re-insert the screws

