



How to connect the wireless network?

Step 1: Long into the administration page of the camera, go to **Wireless LAN Settings** page. Click Scan button to search the wireless networks.

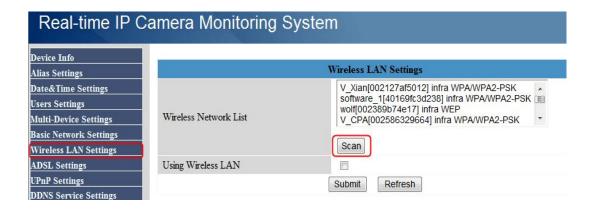


Step 2: Click the wireless network which you want to connected. All the parameters would be filled automatically except the password. Put in the password of the wireless network and then click **Submit**.

For no security.

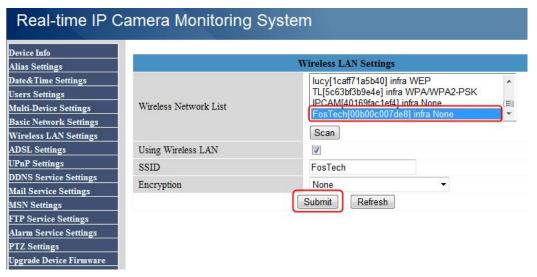


For WEP Encryption , put password in Key1.



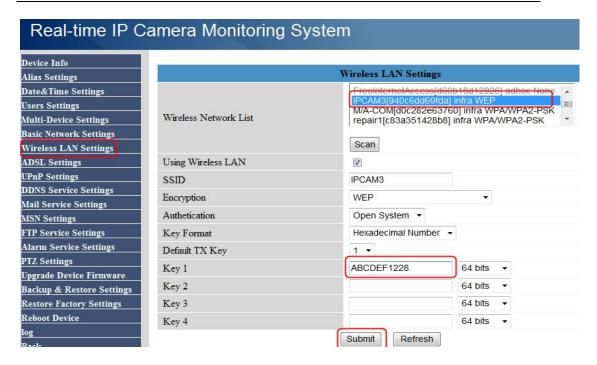

For WPA Encryption, put the password in Share Key.

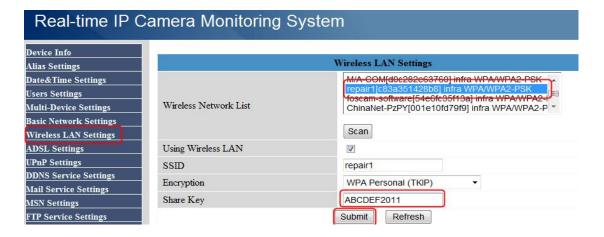

Note:

- 1. Make sure the password is correct and there is no special character. It can be confirmed on the administration page of the wireless router.
- 2. Turn off MAC filtering or add camera's MAC addresses on router. Camera's wire and wireless MAC address are different.